


## DSL Setup Guide for Dynalink RTA1046VW

1. Open your web browser (e.g. Internet Explorer, Mozilla Firefox, Google Chrome, etc)
2. Enter the following into the address bar: 192.168.1.1
3. You will be prompted to enter a username and password
  - **Username:** admin
  - **Password:** admin
4. Click on **Login**
5. On the top left side, click on **Quick start**
6. On the left side menu, click on **Quick Setup**
7. Uncheck the box **Auto Scan Internet Connection (PVC)**

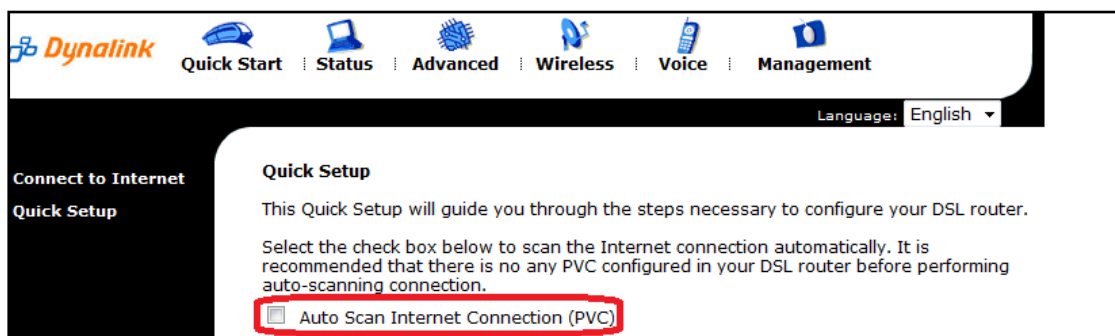

8. For **VPI** - enter 8
9. For **VCI** - enter 35
10. Click **Next**
11. For **Protocol** - select **PPP over Ethernet (PPPoE)**
12. Click **Next**
13. Select **Obtain an IP address automatically**
14. Check the box **Enable NAT**
15. For **MTU** - enter 1492
16. Click on **Next**
17. For **Username** - enter your MyNetFone DSL Username (*make sure to use the correct username format e.g. [username@dsl.mynetfone.com.au](mailto:username@dsl.mynetfone.com.au)*)
18. For **Password** - enter your MyNetFone DSL Password
19. Click **Next**
20. Then click **Finish**
21. Your modem should reboot now.