

VoIP Setup Guide for Dynalink RTA1046VW

1. Open your web browser (e.g. Internet Explorer, Mozilla Firefox, Google Chrome, etc)
2. Enter the following into the address bar: **192.168.1.1**
3. You will be prompted to enter a username and password
 - **Username:** admin
 - **Password:** admin
4. Click on **Login**
5. On the top of the page click on **Voice** in the menu screen
6. For **SIP Registrar Address** - enter your MyNetFone SIP Proxy
7. For **SIP Outbound Proxy** - enter your MyNetFone SIP Proxy
8. For **SIP Proxy Server Address** - enter your MyNetFone SIP Proxy

Enter the following for **Phone 1**

9. For **Phone Number** - enter your MyNetFone Number
10. For **Caller Name** - enter your MyNetFone Number
11. For **User Name** - enter your MyNetFone Number
12. For **Password** - enter your MyNetFone Password

Enter the following for **Phone 2**

13. For **Phone Number** - enter your MyNetFone Number
14. For **Caller Name** - enter your MyNetFone Number
15. For **User Name** - enter your MyNetFone Number
16. For **Password** - enter your MyNetFone Password

SIP Basic Settings

Phone 1: **VOIP mode**
(You can make VOIP phone calls through this port now.)

Phone 2: **VOIP mode**
(You can make VOIP phone calls through this port now.)

Select Tone/Ring Signals for:

Interface:

SIP Transport Protocol: Port:

VoIP Service Provider:

SIP Registrar Address: Port:

SIP Outbound Proxy: Port:

SIP Proxy Server Address: Port:

Registration Information

Phone	Phone Number	Caller Name	User Name	Password
1	Mynetfone Numb	Mynetfone Numb	Mynetfone Numb	••••••••
2	Mynetfone Numb	Mynetfone Numb	Mynetfone Numb	••••••••

17. Click on **Apply**