

DSL Setup Guide for Netgear DG834G / DG834GV

1. Open your web browser (e.g. Internet Explorer, Mozilla Firefox, Google Chrome, etc)
2. Enter the following into the address bar: 192.168.0.1
3. You will be prompted to enter a username and password
 - **Username:** admin
 - **Password:** password
4. Click on **Login**
5. On the left side, click on **Basic Settings**
6. For **Does Your Internet Connection Require A Login?** - select Yes
7. For Encapsulation - select **PPPoE (PPP over Ethernet)**
8. For **Username** - enter your MyNetFone DSL Username (*make sure to use the correct username format e.g. username@dsl.mynetfone.com.au*)
9. For **Password** - enter your MyNetFone DSL Password
10. For **Idle Timeout** - enter 0
11. For Internet IP Address - select **Get Dynamically From ISP**
12. For Domain Name Server - select **Get Automatically From ISP**

Basic Settings

Does Your Internet Connection Require A Login?
 Yes
 No

Encapsulation PPPoE (PPP over Ethernet) ▾

Login username@dsl.mynetfone.c
Password ●●●●●●●●
Service Name (If Required) []
Idle Timeout (In Minutes) 0

Internet IP Address
 Get Dynamically From ISP
 Use Static IP Address
 IP Address [] . [] . [] . []

Domain Name Server (DNS) Address
 Get Automatically From ISP
 Use These DNS Servers
 Primary DNS [] . [] . [] . []
 Secondary DNS [] . [] . [] . []

NAT (Network Address Translation)
 Enable Disable Disable firewall

13. Click on **Apply**

14. On the left side menu, click on **ADSL settings**
15. For Multiplexing Method - select **LLC-BASED**
16. For **VPI** - enter 8
17. For **VCI** - enter 35
18. For DSL Mode - select **Auto (Multi-mode)**

ADSL Settings

Multiplexing Method LLC-BASED ▾

VPI

VCI

DSL Mode Auto (Multi-mode) ▾

19. Click on **Apply**